




Box 459 - Rosemount, MN 55068

Phone 800-328-0953

Fax 800-334-8823

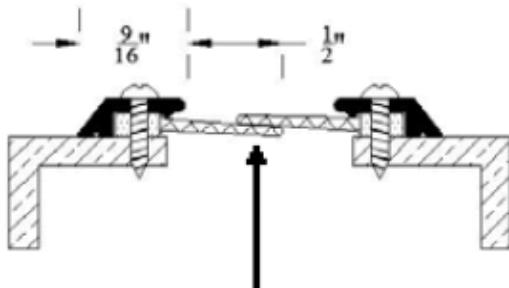

1/8" to 3/16" Polyprene overlap

Astragal Part # 103

This weather strip is designed to fill the space between double doors. The polyprene should overlap between 1/8" to 3/16" as illustrated above.

1. Measure the height of door and cut the two pieces of astragal to equal the height.

2. Fasten one astragal to each face of the individual doors with the screws furnished so as not to interfere with self-closing devices, locks or other door hardware.

3. Operate the door several times to ensure the gasketing material is adjusted properly so as not to inhibit the door from self-closing and latching.



Positive Pressure Tested Gasketing Materials for Fire Doors. Intended for application to/with listed steel frames and/or classified steel covered composite, hollow metal type fire doors rated up to 3 hours, wood and plastic covered composite type fire doors rated up to 1-1/2 hours, and wood core type fire doors rated up to 20 minutes.

Meets CAN4-S104-2010

Meets UL10B, UL10C, UL1784,
Category J Category H
Can use on 'S' Labeled
doors.

17L5

