


Box 459 - Rosemount, MN 55068 Phone 800-328-0953 Fax 800-334-8823

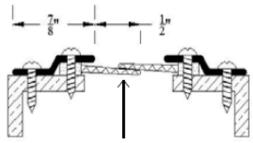

1/8" to 3/16" Polyprene overlap

## Astragal Part # 92

This weather strip is designed to fill the space between the meeting stiles of double doors. The polyprene should overlap between 1/8" to 3/16" as illustrated above.

- 1. Measure the height of door and cut the two pieces of astragal to equal the height.
- 2. Fasten one astragal to each face of the individual doors with the screws furnished so as not to interfere with self-closing devices, locks or other hardware.

3. Operate the door several times to ensure the gasketing material is adjusted properly so as not to inhibit the door from self-closing and latching.



Positive Pressure Tested Gasketing Materials for Fire Intended Doors. application to/with listed steel frames and/or classified steel covered composite, hollow metal type fire doors rated up to 3 hours, wood and plastic covered composite type fire doors rated up to 1-1/2 hours, and wood core type fire rated up to 20 doors minutes.

Meets CAN4-S104-2010
Meets UL10B, UL10C, UL1784,
Category J Category H
Can use on 'S' Labeled
doors. 17L5