




CP6 Corner Pad Black/White

16350 Asher Avenue • Rosemount, MN 55068 • Phone 800-328-0953

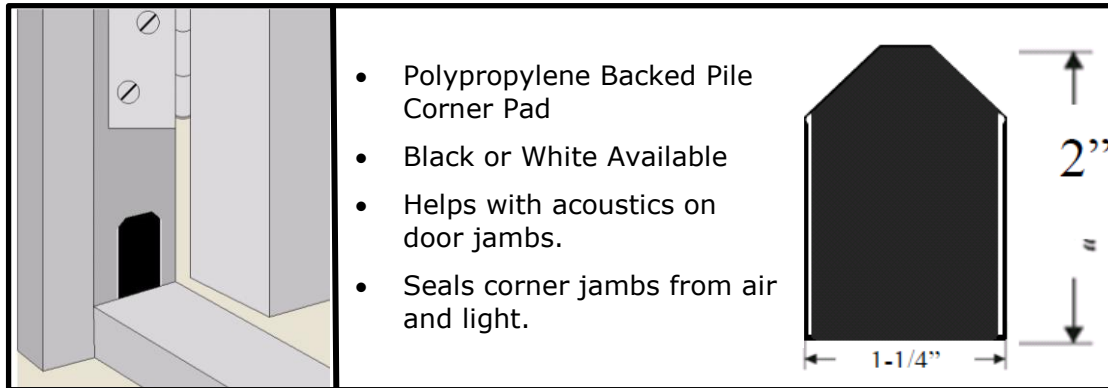

- 1 All self-adhesive weatherstrips must be applied on clean, dry frames between 50°F and 100°F, with end use temperatures between -30°F to 140°F.
- 2 Attach as shown by removing adhesive backing and pressing against door frame on hinge side.
- 3 Repeat step 2 if using the second pad for lock side of door frame.

